



ottobock.

3R80



Quick Reference Guide.



i Setting options


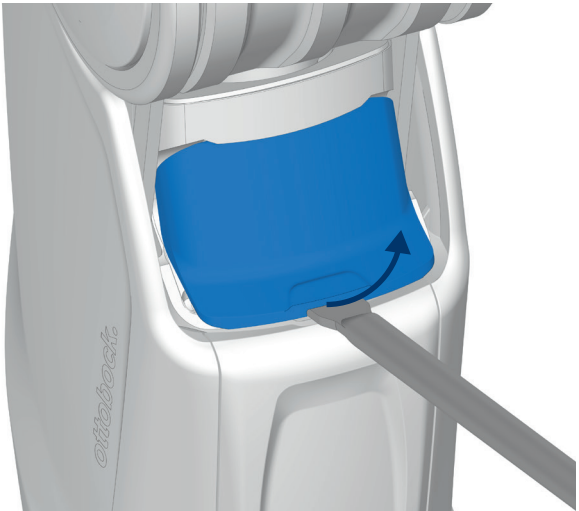
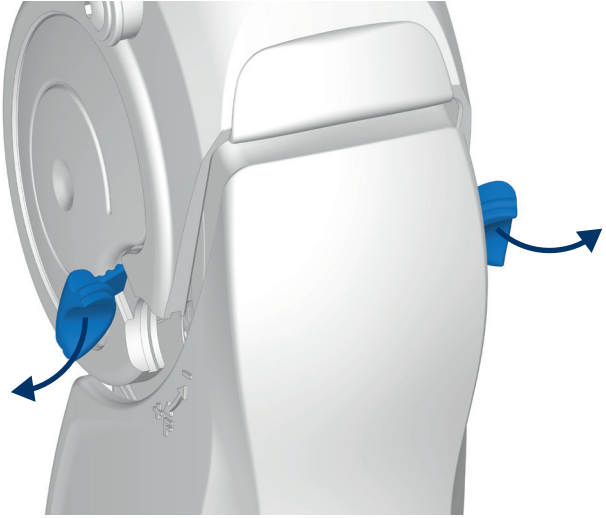


i **Swing phase flexion resistance**


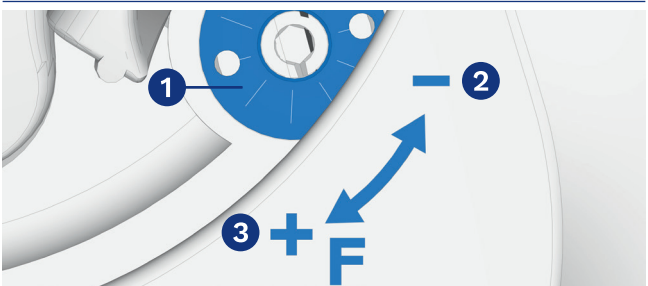
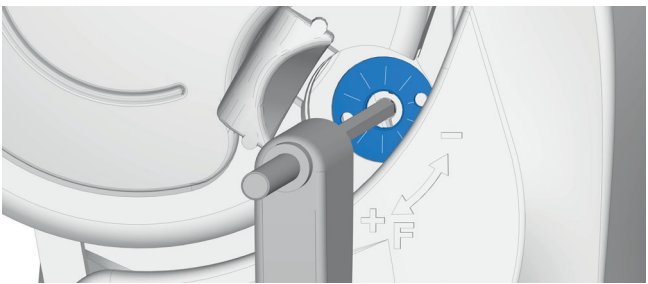


- 1** Setting range: 1,5 revolutions
- 2** Decreasing swing phase flexion resistance
- 3** Increasing swing phase flexion resistance

i **Swing phase flexion resistance**


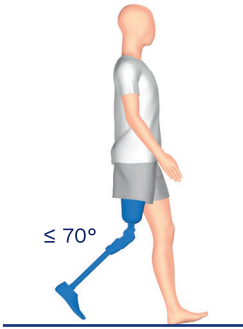
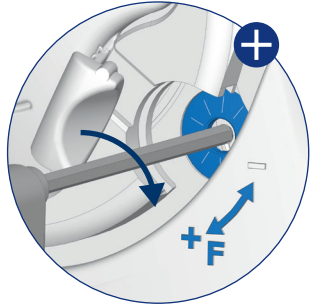
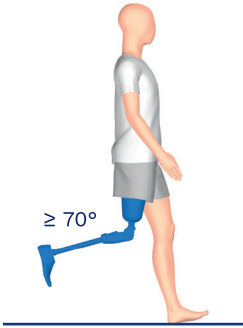


i Swing phase extension resistance

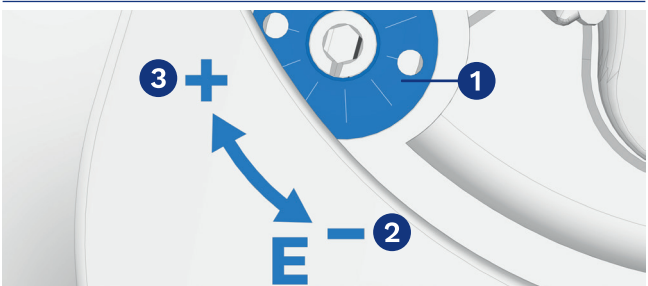
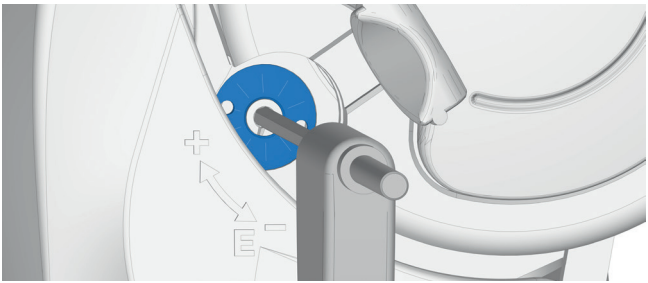
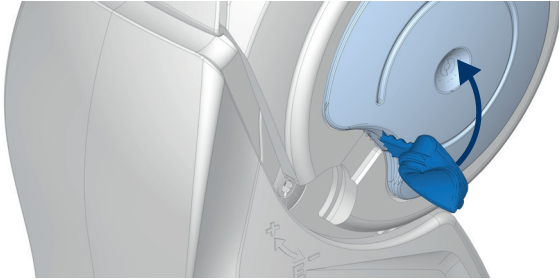


- 1** Setting range: 1,5 revolutions
- 2** Decreasing swing phase extension resistance
- 3** Increasing swing phase extension resistance

i Swing phase extension resistance

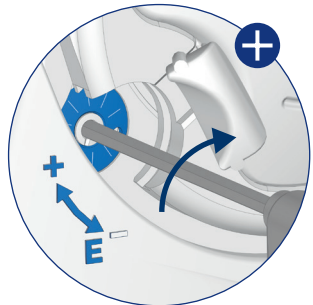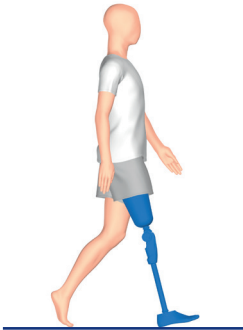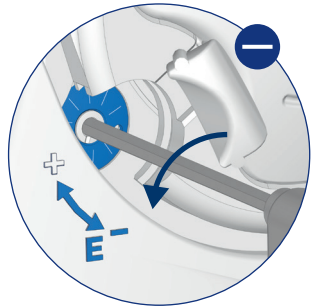
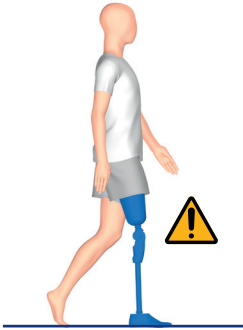


i Switching threshold

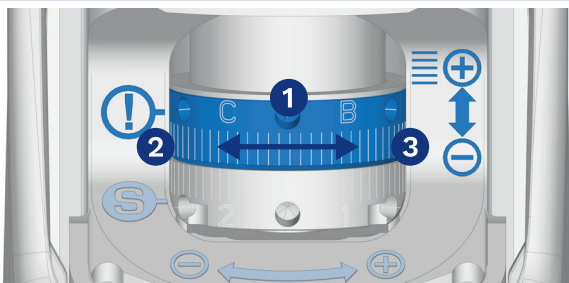
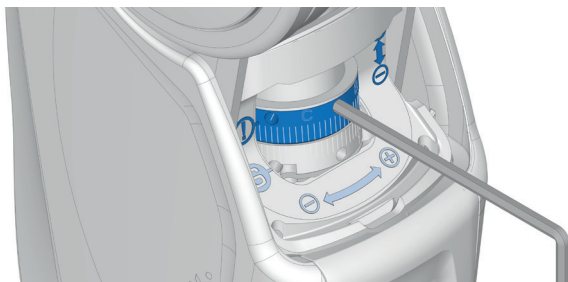
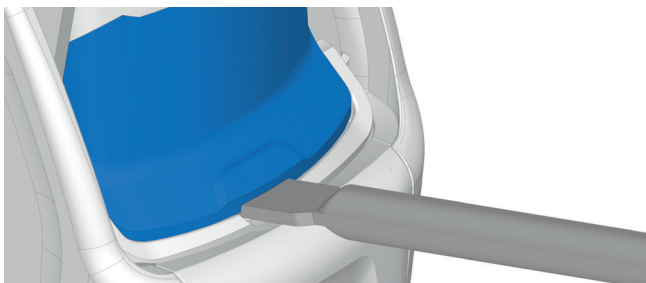


- 1** Setting range: 5x A – F
- 2** Decreasing the switching threshold
- 3** Increasing the switching threshold

i Switching threshold



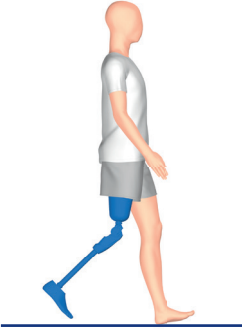
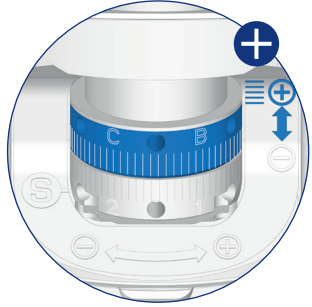


i Stance phase flexion resistance

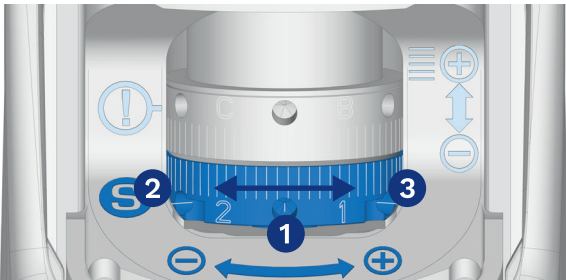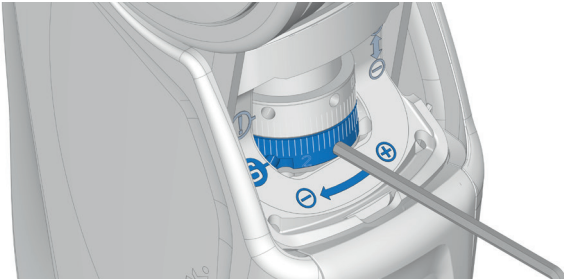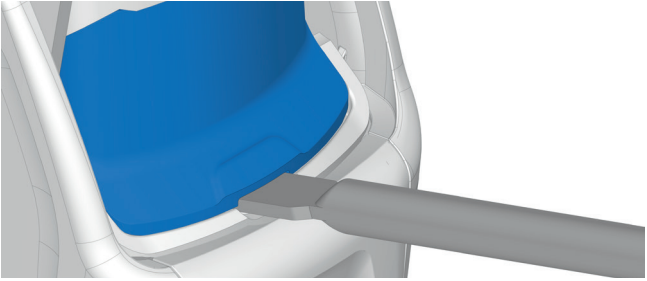

- 1** Setting range: 1 – 6
- 2** Decreasing the stance phase flexion resistance
- 3** Increasing the stance phase flexion resistance

i Stance phase flexion resistance

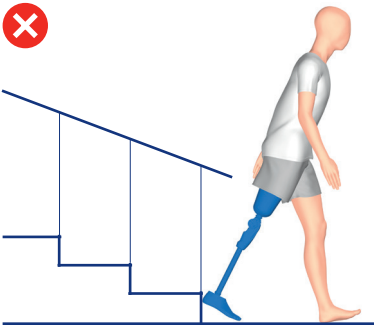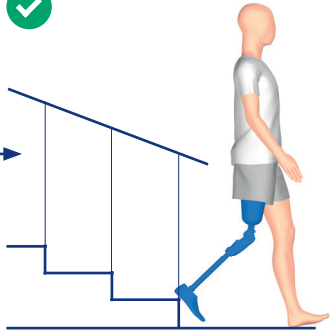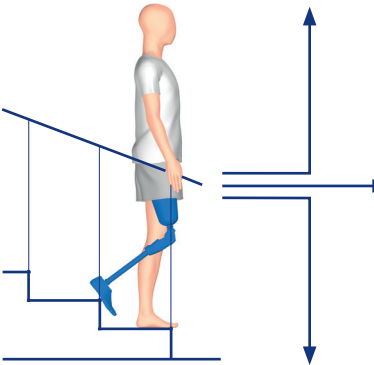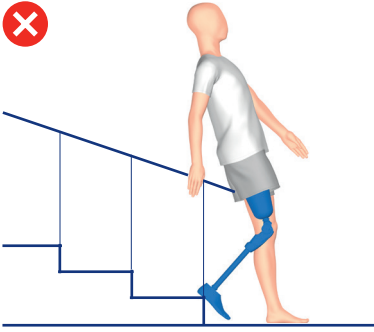

Ottobock SE & Co. KGaA
Max-Näder-Straße 15 · 37115 Duderstadt/Germany
T +49 5527 848-0 · F +49 5527 848-3360
healthcare@ottobock.de · www.ottobock.com